

## Preamp Reset Procedure

Doing this procedure will reset your preamp to the factory defaults. Please read the procedure carefully before doing anything. Make sure that you understand exactly what you are about to do. When in doubt, call BAT.

- 1) Unplug the unit for a few minutes.
- 2) Hold down the two front panel buttons indicated in the table below.
- 3) While holding down the buttons, plug in the unit.
- 4) Release the buttons.
- 5) Turn on the unit.

Find your unit in the table below. Use the indicated button combination. As products are introduced new settings are added, so older units do not have all the selections that are shown. If you choose a selection that is not in your unit, it will be ignored, and the unit will not be reset.

For example, you have a VK-51SE, and you hold down the PHASE and 4 buttons. When you power the unit on, the display still shows VK-51SE. This means that your unit does not have the VK-42SE settings, and has not been reset.

An incorrect setting will not harm the preamp, but may result in unexpected behavior or displays. For example, you may get full volume when you don't want it.

DISPLAY	BUTTONS
-----	-----
VK-300X AMP	mute 1
VK-20 PREAMP	mute 2
VK-30 PREAMP	mute 3
VK-40 PREAMP	mute 4
VK-50 PREAMP	mute 5
VK-300X SE	mono 1
VK-30 SE	mono 2
VK-31 SE	mono 3
VK-50 SE	mono 4
VK-51 SE	mono 5
VK-32 SE	phase 1
VK-32 PREAMP	phase 2
VK-31 PREAMP	phase 3
VK-42 SE	phase 4
VK-52 SE	phase 5
REX PREAMP	4 5